## Ground-Mount Enclosures Type 12 Modular Free-Standing Data Sheet



### **Application**

- Houses electrical controls and instruments
- Protects against circulating dust, falling dirt and dripping non-corrosive liquids

### **Standards**

- UL 508A listed, Type 12
- CSA C22.2 No.94 certified, Type 12
- Conforms to NEMA standard for Type 12

### **Finish**

- Wash and phosphate undercoat
- ANSI 61 gray polyester powder finish
- Panels have a white polyester powder finish

#### **Accessories**

- · Channel mounting hardware
- Blank adapter plates
- Operator adapters
- Touch-up paint
- Replacement handles: deafeater handle BD-PDHB and keyed handle BD-PKHB (see pages 428 & 429).
- See Accessories section

### Construction

- Enclosure and door are fabricated from (12) gauge steel
- All continuous welded seams are finished smooth
- Doors are secured to the body with removable concealed hinges and a center locating 3-point key-locking and padlock handle mechanism
- Modern bevel profile on hinge side of enclosure door(s)
- Slave doors cannot open without activation of mechanical interlock but can close in any order
- Doors have an oil-resistant gasket
- Ground stud provided on door(s) and body
- Print pocket provided
- Modular design and flanged side opening provide strength and a variety of mounting arrangements
- Heavy steel stiffeners welded across the back provide enclosure rigidity
- Removable panels mounted on .375-16 collar studs and panel supports are furnished behind each door
- · Large lifting eyebolts are supplied
- Two styles of enclosure construction and specific features:
  - Single-door disconnect enclosure Left side open. Door hinges left serving as a master door with connecting interlocks which prevent slave doors from opening first. Defeater mechanism on door requires a screwdriver to open. Universal cut-out on right side flange for disconnect operator.
  - Two-door disconnect enclosure Left side open. Both doors hinge left, the right side serving as the master with connecting interlocks which prevent slave doors from opening first. Defeater mechanism on door requires a screwdriver to open. Universal cut-out on right flange for disconnect operator. Center post is removable. Lighting mounting channel provided.

Discount Schedule: C2

**Subclass: DOG** 

#### **Important Note**

When ordering modular enclosure systems, be sure to include all the necessary components.


- 1. Disconnect master or slave enclosure
- 2. Gasket kits and/or end plates (see page 330)
- 3. Operator adapter plates MUST be ordered for the specific brand and type of disconnect being used, (see page 451)

Disconnect switch (or circuit breaker), operating handle and operating mechanism are not furnished with enclosure, see disconnect ordering information, pages 332 - 339.

### **Ground-Mount Enclosures Type 12 Modular Single-Door Free-Standing**

**Illustration Sheet and Catalog Number** 

Enclosure	Enclosu Height x Wi		Panel	Size
Catalog Number	A x E	3 x C	Height >	Width mm
MFD723918-12FS	72.00 x 39.75 x 18.00	1829 x 1010 x 457	60.00 x 33.75	1524 x 857
MFD843918-12FS	84.00 x 39.75 x 18.00	2134 x 1010 x 457	72.00 x 33.75	1829 x 857
MFD843924-12FS	84.00 x 39.75 x 24.00	2134 x 1010 x 610	72.00 x 33.75	1829 x 857

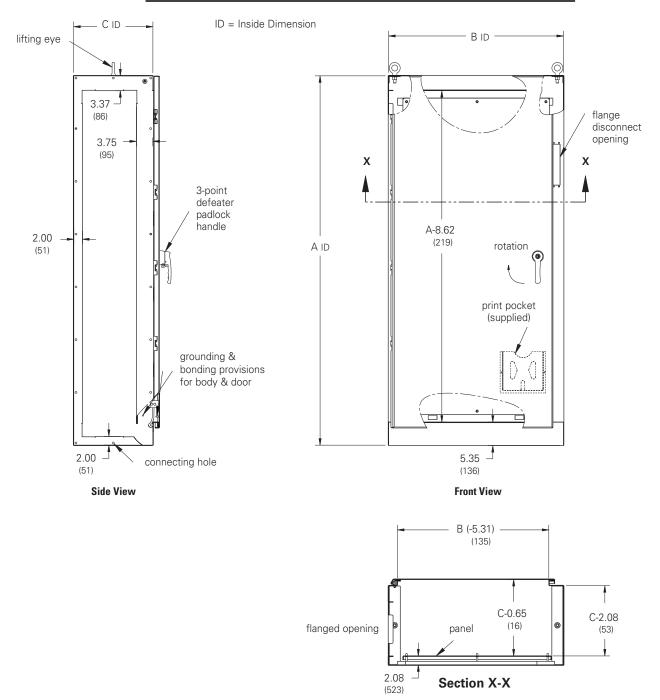



**Notes:** Four lifting eyes are furnished when C dimension is 24 (609 mm). Dimensions are in inches. Millimeters shown are for reference only. Data subject to change without notice.

### Ground-Mount Enclosures Type 12 Modular Double-Door Free-Standing

Illustration Sheet and Catalog Number

Enclosure	Enclosu	Panel Size							
Height x Width x Depth									
Catalog Number	A x E	Height x Width							
MFD727818-12FS	72.00 x 78.00 x 18.00	1829 x 1981 x 457	60.00 x 72.00	1524 x 1829					
MFD847818-12FS	84.00 x 78.00 x 18.00	2134 x 1981 x 457	72.00 x 72.00	1829 x 1829					
MFD847824-12FS	84.00 x 78.00 x 24.00	2134 x 1981 x 610	72.00 x 72.00	1829 x 1829					

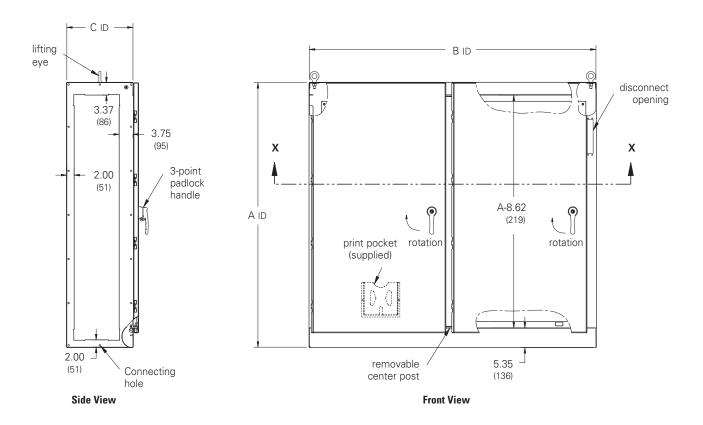

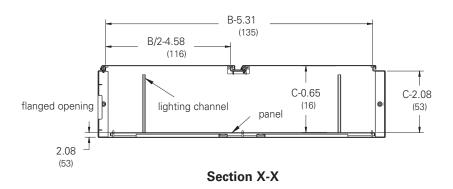


**Notes:** Four lifting eyes are furnished when C dimension is 24 (609 mm). Dimensions are in inches. Millimeters shown are for reference only. Data subject to change without notice.

### Free-Standing Accessories End Plates & Gasket Kits


**Illustration Sheet and Catalog Number** 

### **Modular Accessories**


	Size			Fits Enclosure					
	A B			H x D					
Catalog Number	in.	mm	in.	mm	in.	mm	in.	mm	
End Plate									
M7218-12FEK	72.00	1829	18.00	457	72.00	1829	18.00	457	
M8418-12FEK	84.00	2134	18.00	457	84.00	2134	18.00	457	
M8424-12FEK	84.00	2134	24.00	610	84.00	2134	24.00	610	
Flat End Plate/Barrier									
M7218-12FBK	72.00	1829	18.25	464	72.00	1829	18.00	457	
M8418-12FBK	84.00	2134	18.25	464	84.00	2134	18.00	457	
M8424-12FBK	84.00	2134	24.25	464	84.00	2134	24.00	610	
Gasket Kit									
M7218-12FGK	72.00	1829	18.00	457	72.00	1829	18.00	457	
M8418-12FGK	84.00	2134	18.00	457	84.00	2134	18.00	457	
M8424-12FGK	84.00	2134	24.00	610	84.00	2134	24.00	610	

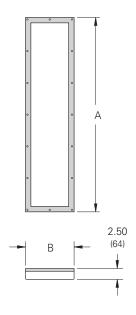



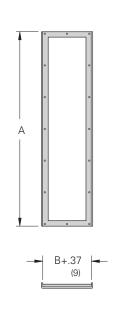

# Flat End Plate Flat end plate and gasket used to seal open end of Modular enclosure. Also can serve as a barrier when additional gasket is used. Includes: Flat End Plate, Gasket & Hardware

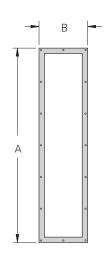



### **Gasket Kit**

Pre-cut and pre-punched high density poron gasket is required for sealing barrier to additional modular enclosures when ganging. Includes: Gasket & Hardware.

### Ground-Mount Enclosures Type 12 Modular Free-Standing

**Illustration Sheet** 

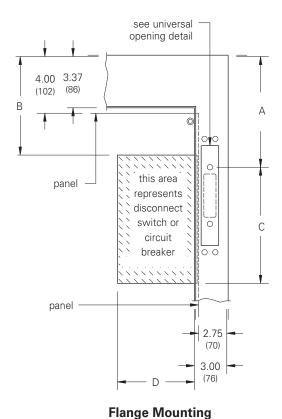

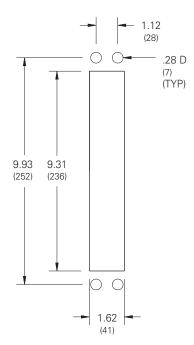

**Universal Opening Detail** 

The dimensional information provided in this drawing is derived from information supplied by the manufacturer of the equipment to be installed. Fit and function of all equipment should be checked before and after installation to assure proper and safe operation and compliance with the applicable regulations, codes and standards.

Universal opening must be filled with an operator adapter kit for the specific brand and type of disconnect being used, (see page 451).

### **Important Note**

When ordering modular enclosure systems, be sure to include all the necessary components.

- 1. Disconnect master or slave enclosure
- 2. Gasket kits and/or end plates (see page 330)
- Operator adapter plates MUST be ordered for the specific brand and type of disconnect being used, (see page 451)

Disconnect switch (or circuit breaker), operating handle and operating mechanism are not furnished with enclosure, see disconnect ordering information, pages 331 - 339.

Notes: Refer to disconnect table for associated dimensions. Dimensions are in inches.

Millimeters shown are for reference only. Data subject to change without notice.