

Important Information:

These instructions contain safety information; read and follow them carefully. Dialight will not accept any responsibility for injury, damage, or loss which may occur due to incorrect installation, operation, or maintenance.

Operating Instructions



Languages

Page Number

English

1

Note: Save these instructions for future use

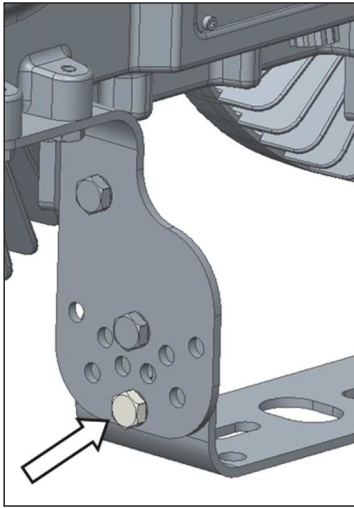


Figure 2 - Angle Locking Bolt

Aim light fixture to desired angle (see Figure 3).

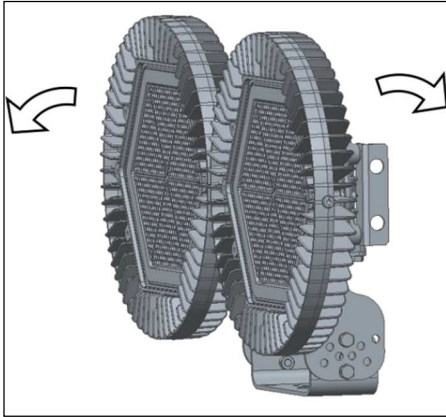


Figure 3 - Position Fixture

Reinstall angle locking bolts on both sides (see Figure 2). Torque to 25 ft-lb [33.9Nm]
Tighten pivot bolts on both sides (see Figure 1). Torque to 25 ft-lb [33.9Nm]

Installation of Luminaire (Electrical Connection)

The luminaire may be supplied with a 3 or 5 core colored cable or have a factory installed wiring compartment. Luminaires fitted with 5 core cable or a factory installed wiring compartment are capable of dimming. Luminaires fitted with a factory installed wiring compartment (except Dual Flood) are capable of interfacing with Dialight controls and automation products; see controls and automation product manuals for additional information.

0-10VDC Dimming


Dimming is controlled by means of a 0-10 VDC signal (to be provided by the installer) to control the level of dimming. At 10 volts, the output of the unit is 100%; at 0 volts, the output will be approximately 5%. The DC dimming voltage should not exceed 15 VDC. Increasing the voltage from 10VDC to 15VDC will not result in additional light output.

Important Notes

- The low voltage Dimming wires are connected to the grounded output section of the driver inside the light. Never connect either one to the Hot or Neutral supply wires.
- Violet wire connects to DIM+
- Grey wire connects to DIM -
- If not being used: appropriate measures should be taken to prevent conductors from making accidental contact with each other or other metal parts.


1) Variable Voltage Control

- An analog 0-10V active dimmer may be connected to the two wires to control the light output of the fixture. Multiple lights may be connected to the same dimmer, as long as the maximum current rating of the dimmer is not exceeded.
- The dimmer must be capable of sinking 0.5mA per light. Light output will vary approximately linearly with control voltage, with 10V corresponding to 100% light output.

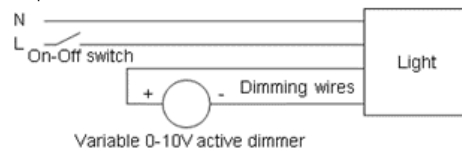

2) Step dimming

- Simply shorting the two wires together will cause the light to dim to a low level. When this is done, the light will dim down to approximately 5% of its full light output, with a corresponding decrease in input power.



Power Input

For single phase units, 100-277VAC connecting the fitted power cable conductors is as follows:

- Green wire connects to Safety Ground (Earth).
- Black wire connects to Live.
- White wire connects to Neutral.

When using 208V (two 120V phases) connect the black wire to one phase and the white wire to the other phase. Since the light fixture does not have an internal fuse on the white wire (as it is normally the neutral), a fuse may be connected in series with the white wire if required.

For 120-250VDC connecting the fitted power cable conductors is as follows:

- Green wire connects to Safety Ground (Earth).
- White wire connects to Negative (-).
- Black wire connects to Positive (+).

For single phase units, 347VAC connecting the fitted power cable conductors is as follows:

- Green wire connects to Safety Ground (Earth).
- Black wire connects to Live.
- White wire connects to Neutral.

For two phase units, 480VAC connecting the fitted power cable conductors is as follows:

- Green wire connects to Safety Ground (Earth).
- Red or white wire connects to Line 1.
- Black wire connects to Line 2.

Electrical Installation - Junction Box

The push terminal block (WAGO 862 series)* is suitable for multi-stranded and single core cables 20-12 AWG, strip length 0.393". Push down at the 'cross point', insert correct cable and release, ensuring the cable has been securely retained.

Terminal block positions are labeled to assist in making the correct wire connections.

Torque screws on rectangular junction box cover to 20 in-lb.

Torque screws on hexagonal junction box cover to 70 in-lb.

* All product names, logos, and brands are property of their respective owners. All company, product and service names used in this document are for identification purposes only. Use of these names, logos, and brands does not imply endorsement.

Electrical Installation - 347-480V Junction Box

- Green or Green/Yellow wire connects to Safety Ground (Earth).

For 347V wiring:

- Red or White wire connects to Neutral. Remove red wire leads from fuse block and connect directly together using appropriate wire connector. (Lever nut, wire nut, etc.)
- Black wire connects to Live.

For 480V wiring:

- Red or White wire connects to Line 2.
- Black wire connects to Line 1.
- Re-attach the Fuse Block Covers.
- Dimming (0-10V) can be connected to the violet and grey wires using connectors (WAGO 222 series)* provided.
- Torque all 3 wiring box locking nuts to 20 ft-lb [27 N-m].

Interfacing to a PIR or Occupancy Sensor

The Dialight fixture is ideally suited for control by an occupancy sensor in order to maximize energy savings based on its instant-on behavior and low power consumption. Instructions for connecting the fixture to an occupancy sensor are listed below.

WARNING: To be installed and/or used in accordance with appropriate electrical codes and regulations.

WARNING: Controlling a load in excess of the specified ratings of the occupancy sensor could damage the unit and pose risk of fire, electric shock, personal injury, or death. Check load ratings to determine the unit's suitability for your application.

WARNING: To avoid fire and electrical shock, turn off power at circuit breaker or fuse and test that the power is off before wiring.


The Dialight fixture is also ideally suited for control by an external occupancy sensor (not provided by Dialight) in order to maximize energy savings based on its instant-on behavior and low power consumption. Instructions for connecting the fixture to an occupancy sensor are listed below.

1) Install occupancy sensor as per sensor instructions to provide desired coverage of area.

2) Connect luminaire wires as follows:


For 120-277VAC operation:

Black lead to load of the occupancy sensor, White lead to the line (neutral), Green lead to earth ground. Multiple luminaires may be connected to a sensor, as long as the rated load of the sensor is not exceeded.

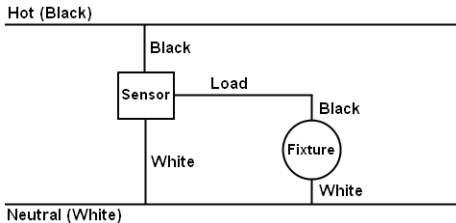


For 347VAC operation:

Red lead to load of the occupancy sensor, black lead to the line (neutral), green lead to earth ground.

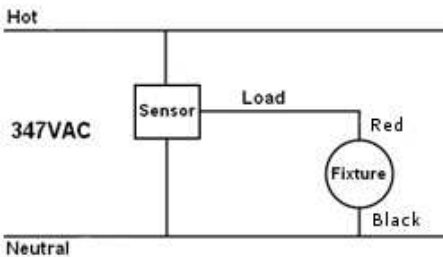

For 480VAC operation:

Red and black leads to load of occupancy sensor, green lead to earth ground. Multiple fixtures may be connected to a sensor, as long as the rated load of the sensor is not exceeded.

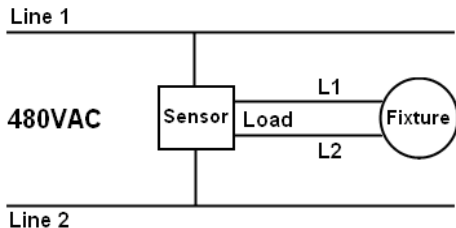

3) Restore power at circuit breaker or fuse.

4) Verify operation of system. If the light will not turn on, check the operation of the luminaire and sensor individually and check that the wiring is done correctly. If the light will not turn off or turns off and on quickly, see the sensor's installation instructions for further guidance.

Maintenance

To avoid personal injury, disconnect power to the light and allow the unit to cool down before performing maintenance.

WARNING: No user serviceable parts inside of fixture. Risk of electric shock. Removal of the lens will void the warranty.

Perform visual, mechanical, and electrical inspections on a regular basis. Dialight recommends checks to be made on a yearly basis. Frequency of use and environmental conditions, however should determine

the frequency of checks. It is recommended to follow an Electrical Preventive Maintenance Program as described in NFPA 70B: Recommended Practice for Electrical Equipment.

The lens should be cleaned periodically, as needed, to ensure continued photometric performance.

Clean the lens with a damp, non-abrasive, and lint-free cloth. If not sufficient, use mild soap or a liquid cleaner. Do not use and abrasive, strong alkaline, or acid cleaners as damage may occur.

Inspect the cooling fins on the luminaire to ensure that they are free of any obstructions or contamination (i.e. excessive dust build-up). Clean with a non-abrasive cloth, if needed.

The light source of this luminaire is not replaceable; when the light source reaches its end of life the whole luminaire shall be replaced.

Secondary Retention

When using a safety cable for secondary retention, ensure minimum slack (no greater than 1 foot) in cable after installation. Connect safety cable to outer band of fixture or accessory retention points. Cable type, size, material, and attachment method to meet customer application and to be appropriate with all local and regional regulations.


Chemical Compatibility Guide


The chemical compatibility data referenced in this manual was supplied by the raw material manufacturers and is intended as a general guide. The data represents the basic material properties and does not necessarily represent the performance of the final product due to manufacturing process and design variations for each final product. Chemical compatibility is highly dependent on concentration, temperature, humidity, and other environmental conditions and therefore the customer assumes responsibility for evaluation of gaseous or direct contact chemical compatibility at their site prior to product installation.

www.dialight.com/pubs/MDTFCHEMRFLX001.pdf

Technical Diagrams

Dimensions in inches [mm]

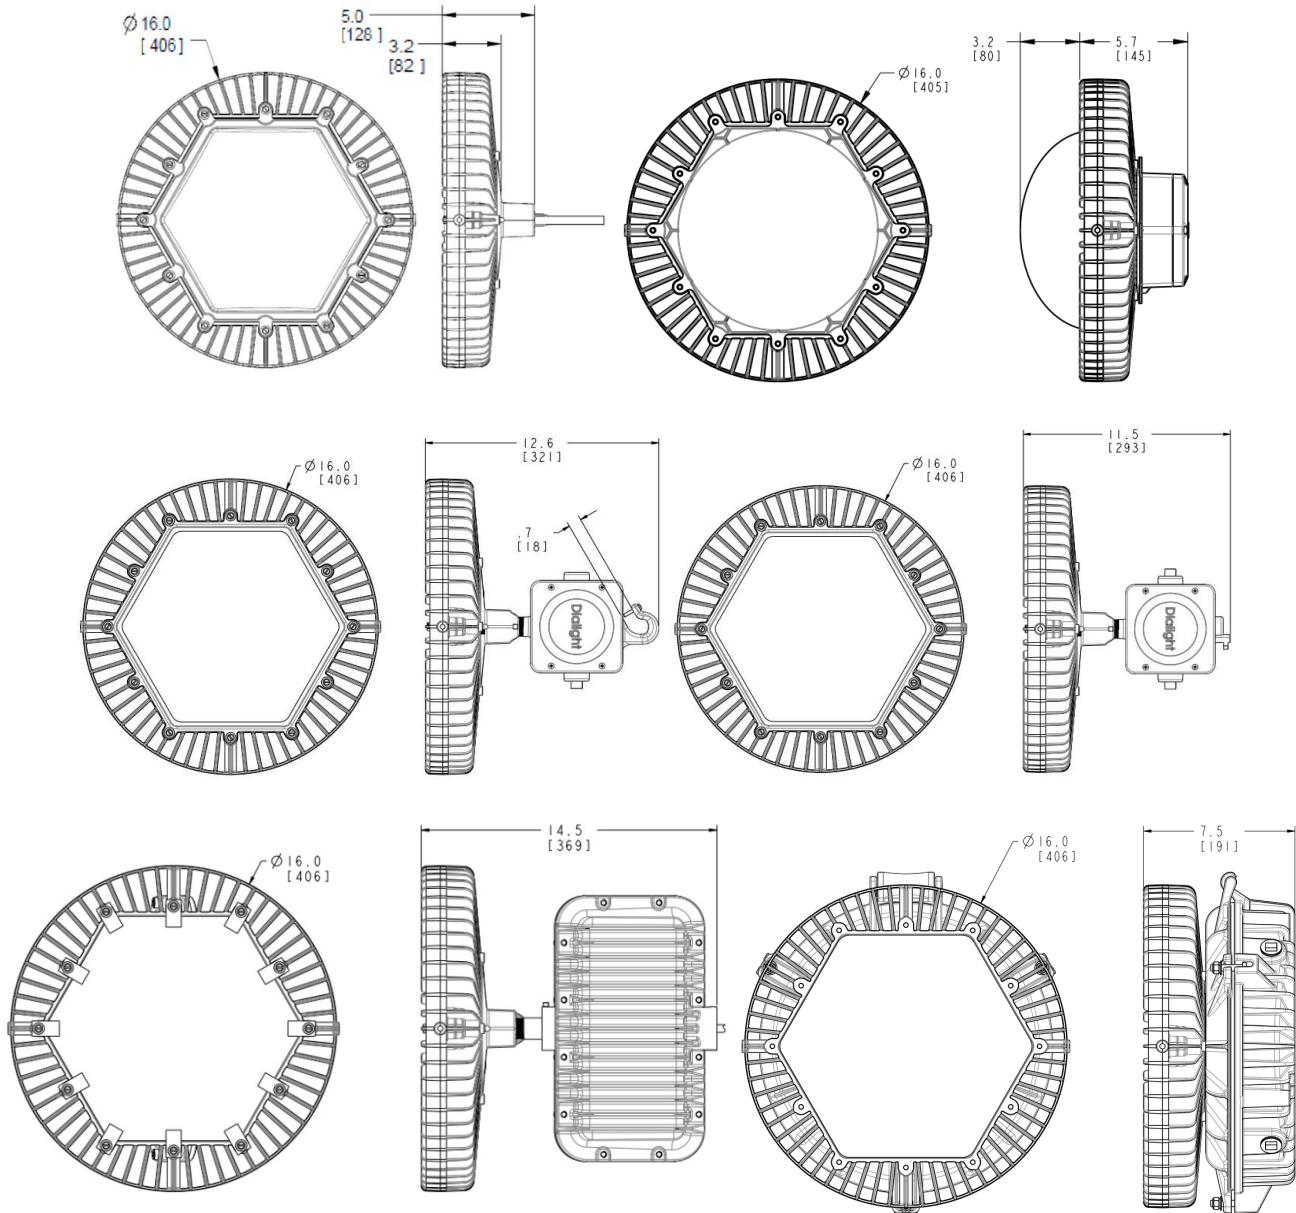

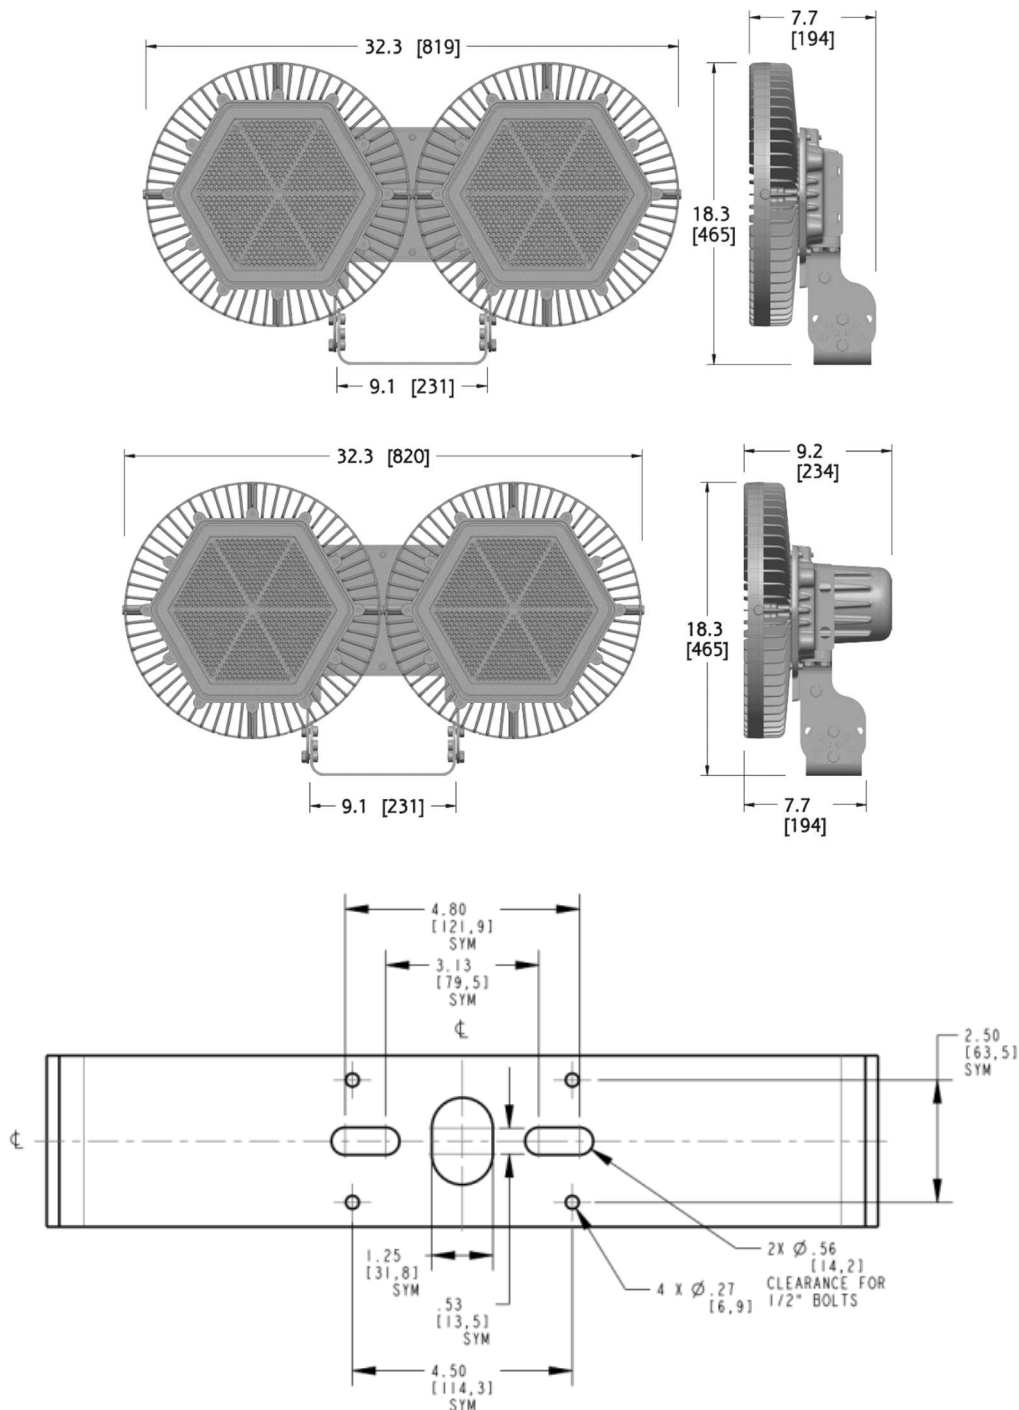

Official Statement

All statements, technical information, and recommendations contained herein are based on information and tests that Dialight believes to be reliable. The accuracy or completeness thereof is not guaranteed. In accordance with Dialight "Terms and Conditions of Sale" and since conditions of use are outside our control, the purchaser should determine the suitability of the product for his or her intended use and assumes all risk and liability whatsoever in connection therewith.