


CSPP - SERIES

BUL88700
REV. A


ASSEMBLY INSTRUCTIONS FOR CSPP PERFORATED PANELS.

PARTS LIST		
PART #	DESCRIPTION	QUANTITY
1	10-32 X 1/2" LG SCREW	1
2	PERFORATED PANEL	1
3	SPACER	1
4	ENCLOSURE (NOT INCLUDED)	-

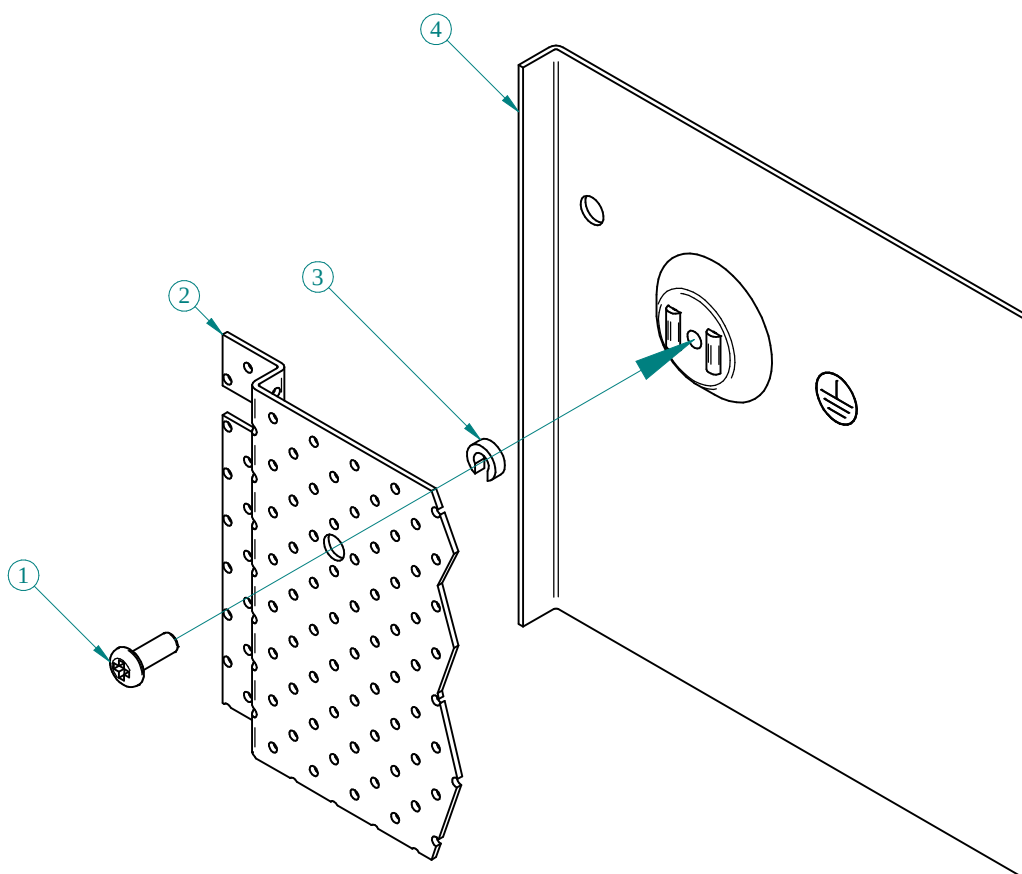

Instructions:

- 1) Place screw through 3/16 (0.1875") hole in perforated panel.
- 2) Holding screw in place, clip optional spacer onto screw behind perforated panel.
Caution: Neglecting use of spacer will cause panel to bow/flex.
- 3) Align screw to hole on the center of emboss on the enclosure.
- 4) Using Phillips screwdriver lightly tighten the screw to the emboss. Tighten until perforated panel is securely in place.

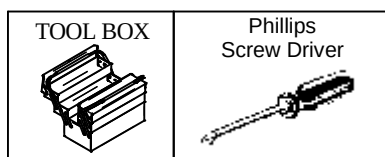

**HAMMOND
MANUFACTURING™**
www.hammondmfg.com