

Installation Instructions for different UFO high bay fixtures

1. If used for 65/770R1

Step 1: Screw three holes as shown below. (Figure 1)

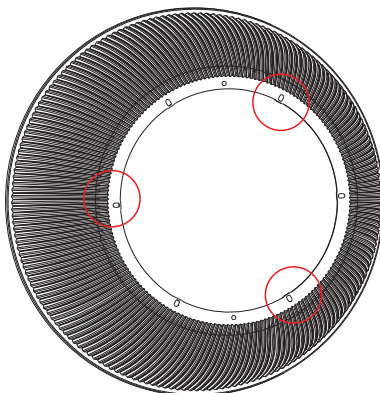


Figure 1

2.If used for fixed wattage/CCT version

(65/781R1, 65/782R1, 65/783R1, 65/784R1, 65/791R1, 65/792R1, 65/793R1, 65/794R1, 65/801, 65/802, 65/803, 65/804)

Step 1: Screw four holes as shown below. (Figure 2)

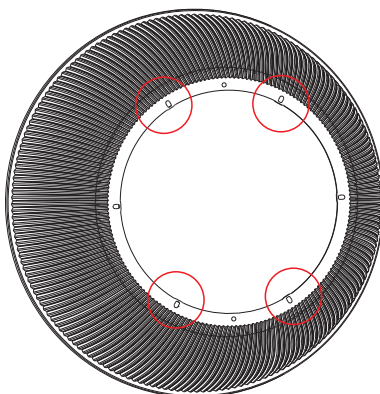


Figure 2