




RIGHT SIDE INSTALLATION

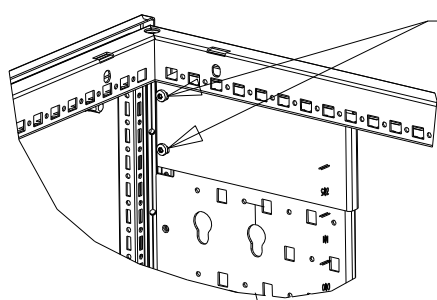


INSTALL MOUNT BRACKET
WITH TWO SCREWS

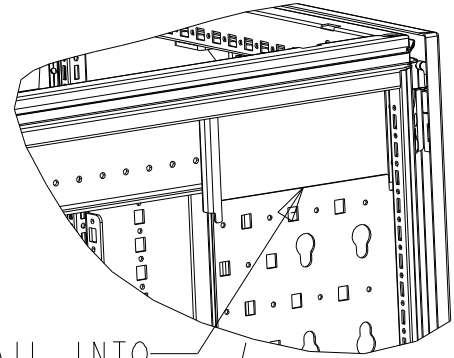

PLACE PDU RAIL INTO
MOUNT BRACKET

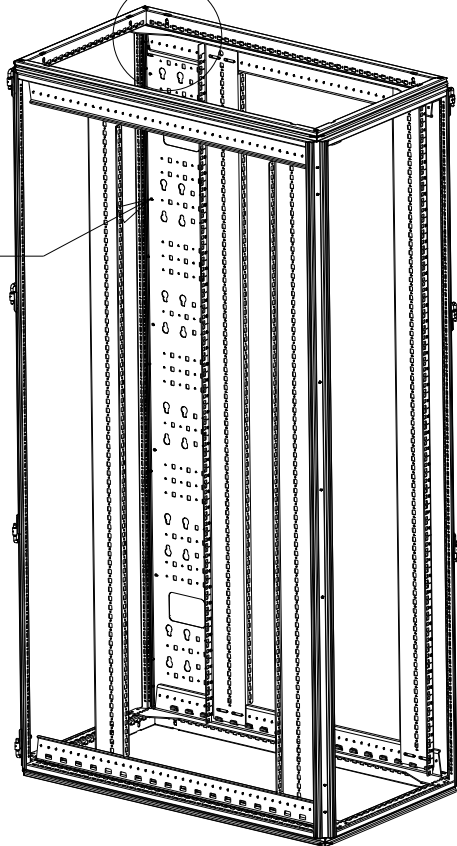

INSTALL RAIL TO
FRAME USING 6
SCREWS

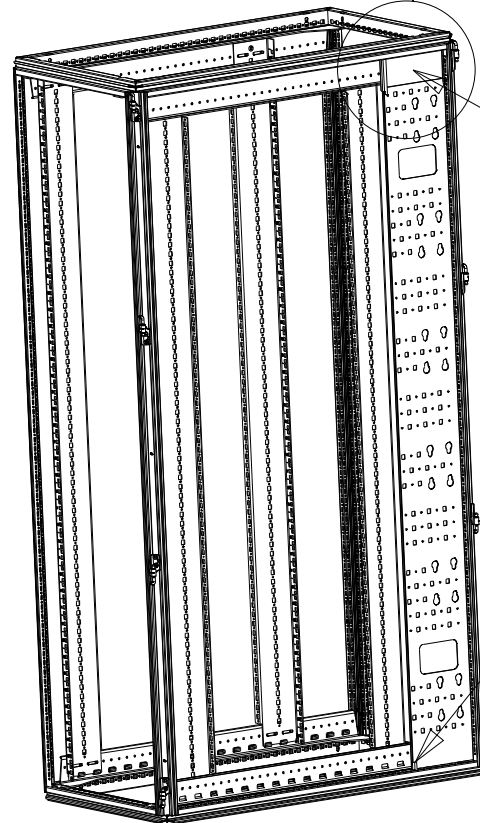


IF PDU RAIL IS
INSTALLED ON
RIGHT SIDE OF
CABINET BRACKET
IS MOUNTED ON TOP


IF PDU RAIL IS
MOUNTED ON RIGHT
SIDE RAIL TAB
FACES DOWN

LEFT SIDE INSTALLATION

IF PDU RAIL IS
MOUNTED ON LEFT
SIDE RAIL TAB
FACES UP

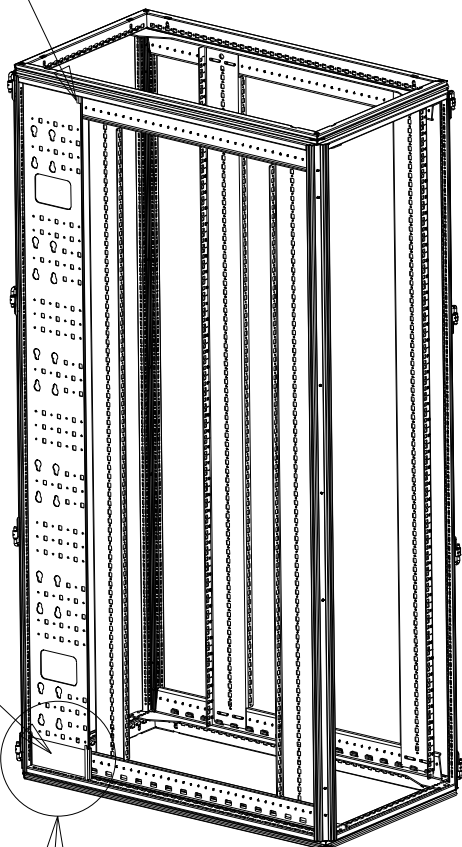


IF PDU RAIL IS
INSTALLED ON
LEFT SIDE OF
CABINET BRACKET
IS MOUNTED ON
BOTTOM

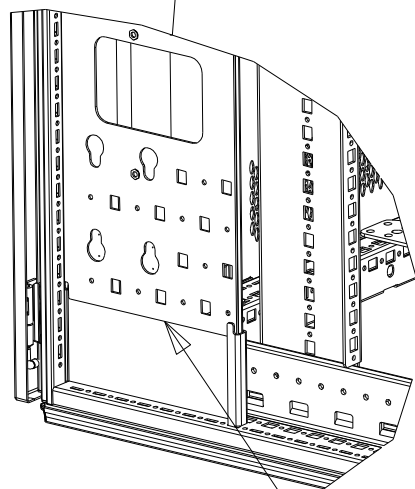

PLACE PDU RAIL INTO
MOUNT BRACKET

INSTALL RAIL TO
FRAME USING 6
SCREWS

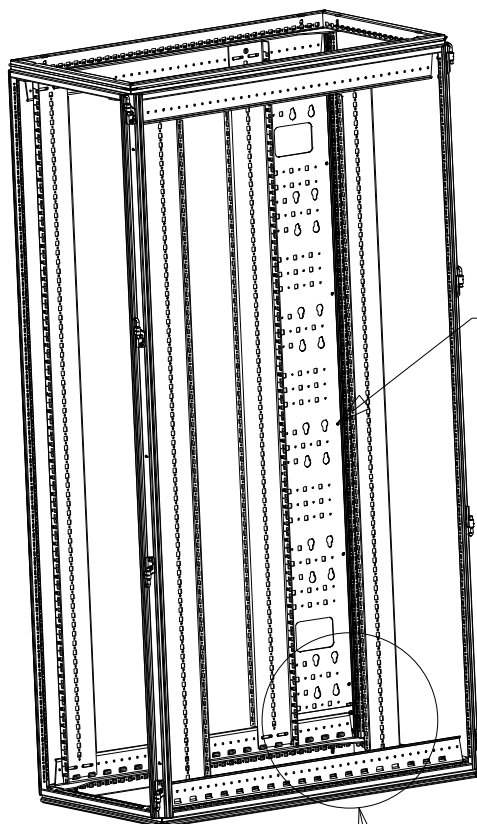

INSTALL MOUNT BRACKET
USING TWO SCREWS

